BookletChartTM


NORA TO ATMOSPHERIC ROMMETRATION AND ATMOSPHE

Rochester Harbor – Genesee River to Head of Navigation NOAA Chart 14815

A reduced-scale NOAA nautical chart for small boaters When possible, use the full-size NOAA chart for navigation.



- Complete, reduced-scale nautical chart
- Print at home for free
- Convenient size
- Up-to-date with Notices to Mariners
- Compiled by NOAA's Office of Coast Survey, the nation's chartmaker

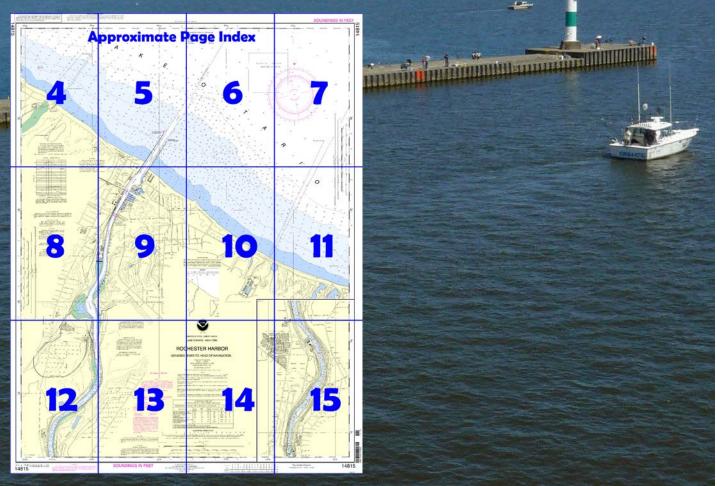

Published by the National Oceanic and Atmospheric Administration National Ocean Service Office of Coast Survey www.NauticalCharts.NOAA.gov

<u>www.NauticalCharts.NOAA.gov</u> 888-990-NOAA

What are Nautical Charts?

Nautical charts are a fundamental tool of marine navigation. They show water depths, obstructions, buoys, other aids to navigation, and much more. The information is shown in a way that promotes safe and efficient navigation. Chart carriage is mandatory on the commercial ships that carry America's commerce. They are also used on every Navy and Coast Guard ship, fishing and passenger vessels, and are widely carried by recreational boaters.

What is a BookletChart[™]?

This BookletChart is made to help recreational boaters locate themselves on the water. It has been reduced in scale for convenience, but otherwise contains all the information of the full-scale nautical chart. The bar scales have also been reduced, and are accurate when used to measure distances in this BookletChart. See the Note at the bottom of page 5 for the reduction in scale applied to this chart.

Whenever possible, use the official, full scale NOAA nautical chart for navigation. Nautical chart sales agents are listed on the Internet at http://www.NauticalCharts.NOAA.gov.

This BookletChart does NOT fulfill chart carriage requirements for regulated commercial vessels under Titles 33 and 44 of the Code of Federal Regulations.

Notice to Mariners Correction Status

This BookletChart has been updated for chart corrections published in the U.S. Coast Guard Local Notice to Mariners, the National Geospatial Intelligence Agency Weekly Notice to Mariners, and, where applicable, the Canadian Coast Guard Notice to Mariners. Additional chart corrections have been made by NOAA in advance of their publication in a Notice to Mariners. The last Notices to Mariners applied to this chart are listed in the Note at the bottom of page 7. Coast Pilot excerpts are not being corrected.

For latest Coast Pilot excerpt visit the Office of Coast Survey website at http://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=148 https://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=148 https://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=148 https://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=148 https://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=148 https://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=148 <a href="https://www.nauticalcharts.noaa.gov/nsd/searchbycharts.n



(Selected Excerpts from Coast Pilot)

From Irondequoit Bay west-northwest for 3.8 miles to the mouth of the Genesee River, deep water is about 0.5 mile offshore. A rock covered ½ foot is close inshore about 0.7 mile southeast of the Genesee River entrance.

Rochester Harbor, at the mouth of the Genesee River, is 54 miles west of Oswego Harbor and about 7 miles north of the main business district of the city of Rochester, NY. The river is navigable for

about 5.5 miles above the mouth. The first of a group of dams is about 7 miles upstream from Lake Ontario. There is no navigable connection between the lower portion of the Genesee River and the New York State

Canal, which connects with the river about 11 miles upstream from the lake. The surface elevation of the river falls more than 260 feet between the Rochester Terminal of the New York State Canal System and the head of navigation of the lower portion of the river below the dams. An unmarked **dumping ground** with a least reported depth of 35 feet is about 1.8 miles northeast of the mouth of the Genesee River.

Prominent features.—The lighted stacks at the powerplant 1.6 miles west-northwest of the river mouth, the stacks at the sewage treatment plant 1.9 miles southeast of the river mouth, and the tall apartment building 1.1 miles southwest of the river mouth are the most prominent objects from offshore.

Rochester Harbor Light (43°15′48″N., 77°36′00"W.), 40 feet above the water, is shown from a white cylindrical tower with red band on the outer end of the west pier.

Channels.—From Lake Ontario, the river is entered through a dredged channel that leads between two piers, thence upstream for 2.6 miles above the mouth. There are two turning basins, one just inside the mouth and the other 2 miles above the mouth on the west side of the channel; the upper turning basin is no longer maintained. The outer ends of the entrance piers are marked by lights; mooring is only allowed on the lakeside of the piers. (See Notice to Mariners and latest edition of charts for controlling depths.)

Dangers.—It is reported that northeast winds sometimes create waves as high as 6 feet which reflect through the entrance channel between the piers, making navigation into the harbor difficult. River currents sometimes compound this problem. A dangerous sunken wreck is 0.8 mile east-northeast of Rochester Harbor Light.

Bridges.—Two bridges cross the dredged section of the Genesee River. The CSX Transportation Railroad bridge 0.9 mile above the pierheads has a swing span with a clearance of 10 feet. The O'Rorke bridge, 1.25 miles above the pierheads, has a bascule span with a clearance of 41 feet (45 feet at center). (See 33 CFR 117.1 through 117.59 and 117.785, chapter 2, for drawbridge regulations.) Overhead power cables crossing the river 2.8 miles above the pierheads have a clearance of 141 feet. Above the limit of the Federal project, a pipeline bridge, about 5.1 miles above the pierheads, has a fixed span with a clearance of 86 feet. The Ridge Road (U.S. Route 104) bridge, about 5.5 miles above the pierheads, has a fixed span with a clearance of 160 feet. The Driving Park Avenue bridge, 6.4 miles above the pierheads, has fixed span with unknown clearance.

Supplies.—Some marine supplies, water, provisions, and diesel fuel can be obtained at Rochester.

Small-craft facilities.—Marinas at Rochester provide transient berths, gasoline, diesel fuel, water, ice, electricity, sewage pump-out, marine supplies, launching ramps, mobile lifts to 40 tons, and hull, engine, and electronic repairs. In 1977, depths of 2 to 12 feet were reported alongside the berths.

Communications.—Rochester is served by rail, air, and bus. Rochester-Monroe County Airport is about 10 miles south-southwest of the river entrance.

U.S. Coast Guard Rescue Coordination Center 24 hour Regional Contact for Emergencies

RCC Cleveland

Commander

9th CG District (216) 902-6117 Cleveland, OH

2




NOAA's navigation managers serve as ambassadors to the maritime community.

They help identify navigational challenges facing professional and recreational mariners, and provide NOAA resources and information for safe navigation. For additional information, please visit nauticalcharts.noaa.gov/service/navmanagers


To make suggestions or ask questions online, go to *nauticalcharts.noaa.gov/inquiry*. To report a chart discrepancy, please use *ocsdata.ncd.noaa.gov/idrs/discrepancy.aspx*.

Lateral System As Seen Entering From Seaward on navigable waters except Western Rivers




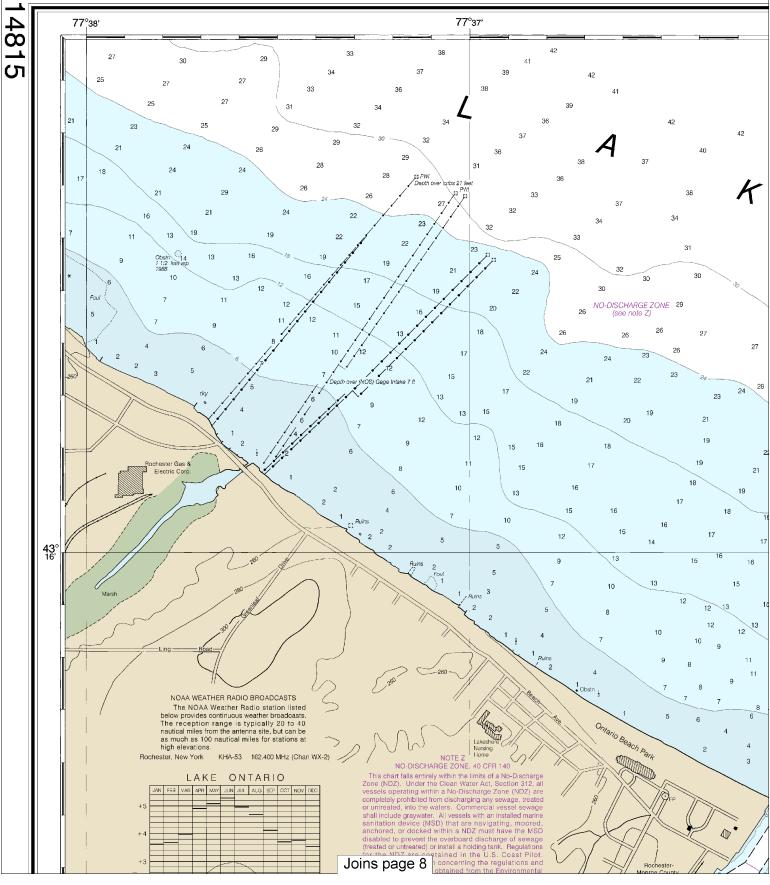





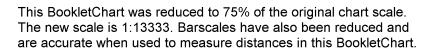




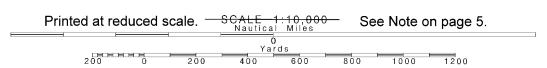


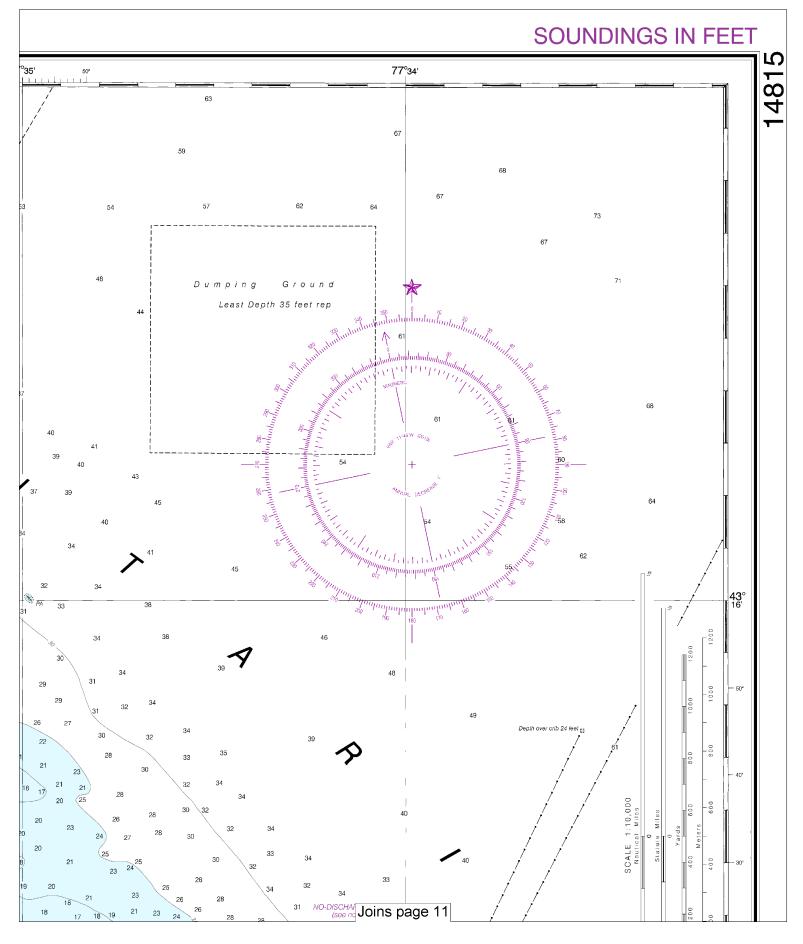

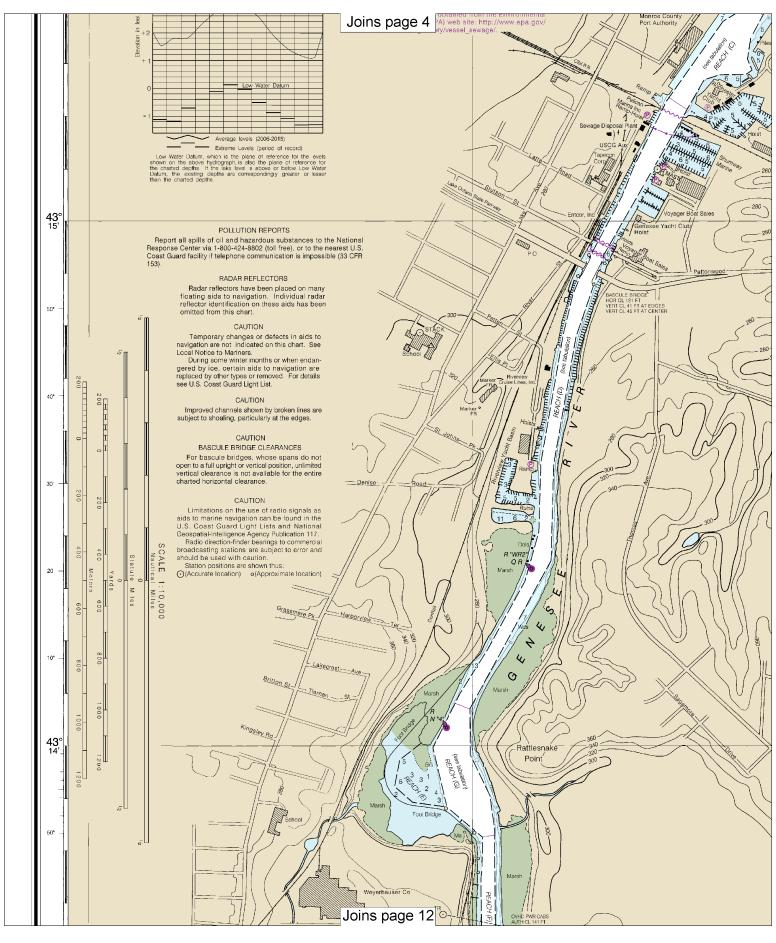





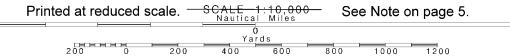


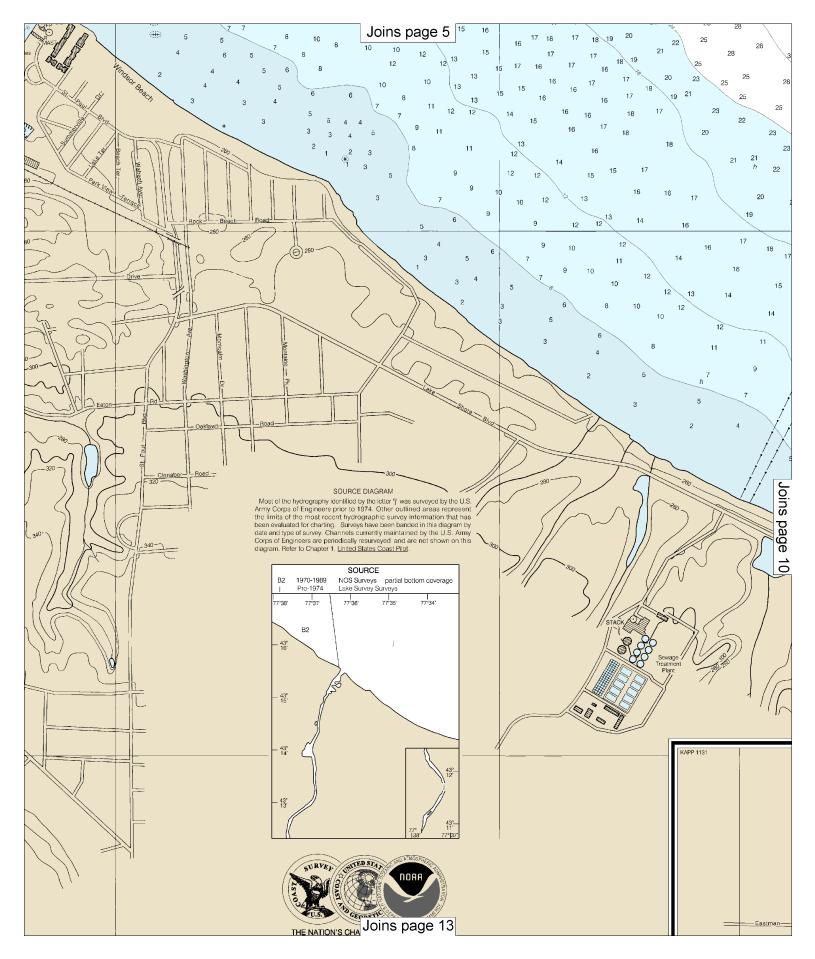




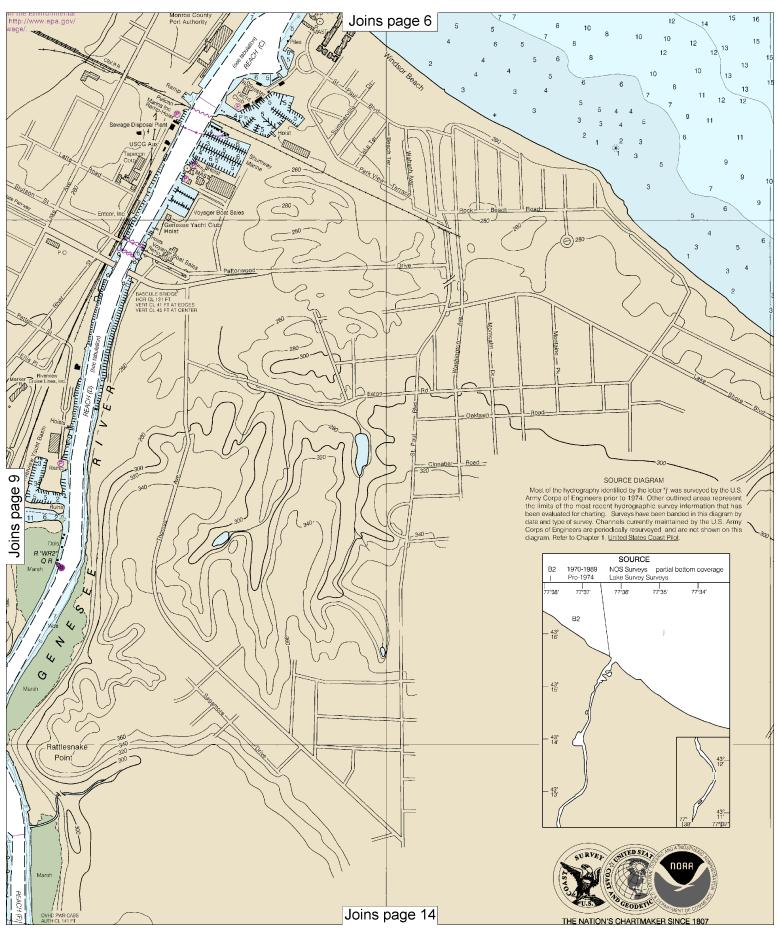

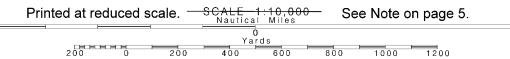


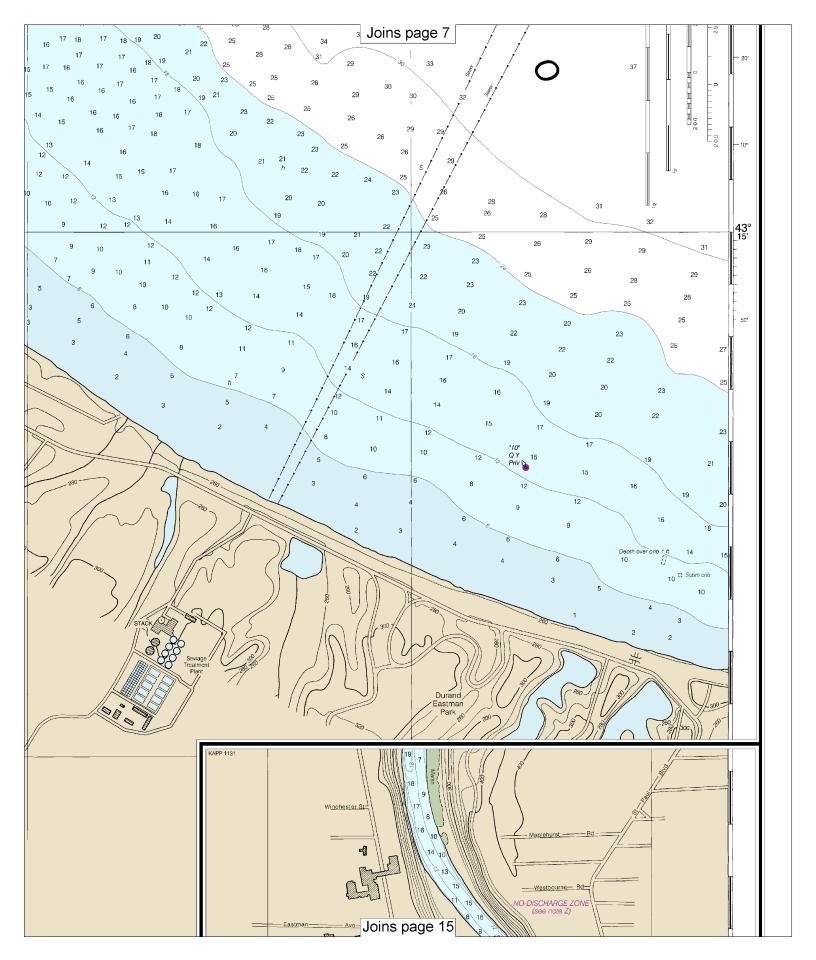


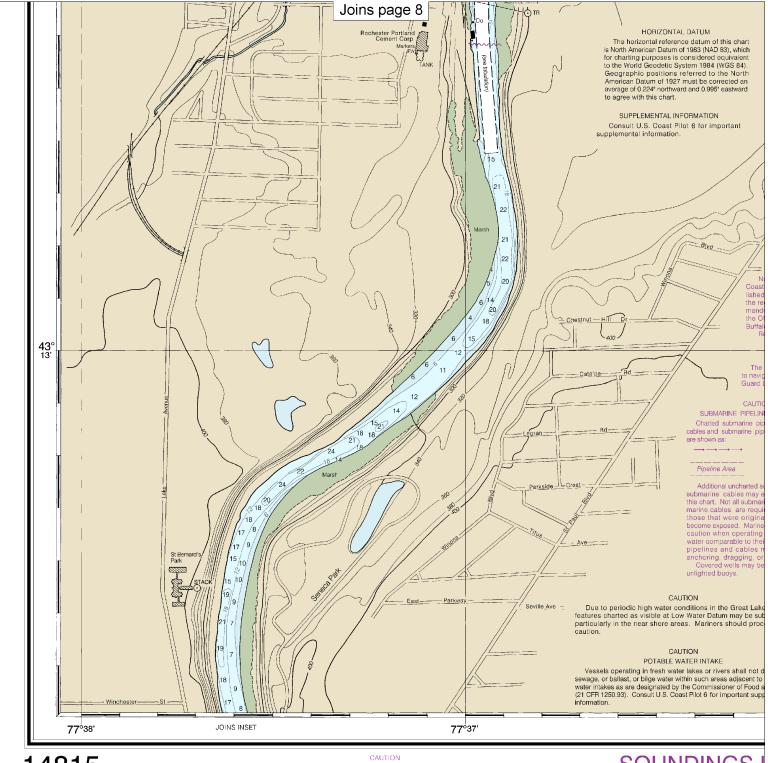


This chart has been corrected from the Notice to Mariners (NM) published weekly by the National Geospatial-Intelligence Agency and the Local Notice to Mariners (LNM) issued periodically by each U.S. Coast Guard district to the dates shown in the lower left hand corner. Chart updates corrected from Notice to Mariners published after the dates shown in the lower left hand corner are available at nauficalcharts.noaa.gov.

24th Ed., Dec. 2013. Last Correction: 10/14/2016. Cleared through: LNM: 4816 (11/29/2016), NM: 4916 (12/3/2016), CHS: 1116 (11/25/2016) SOUNDINGS

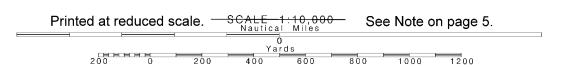

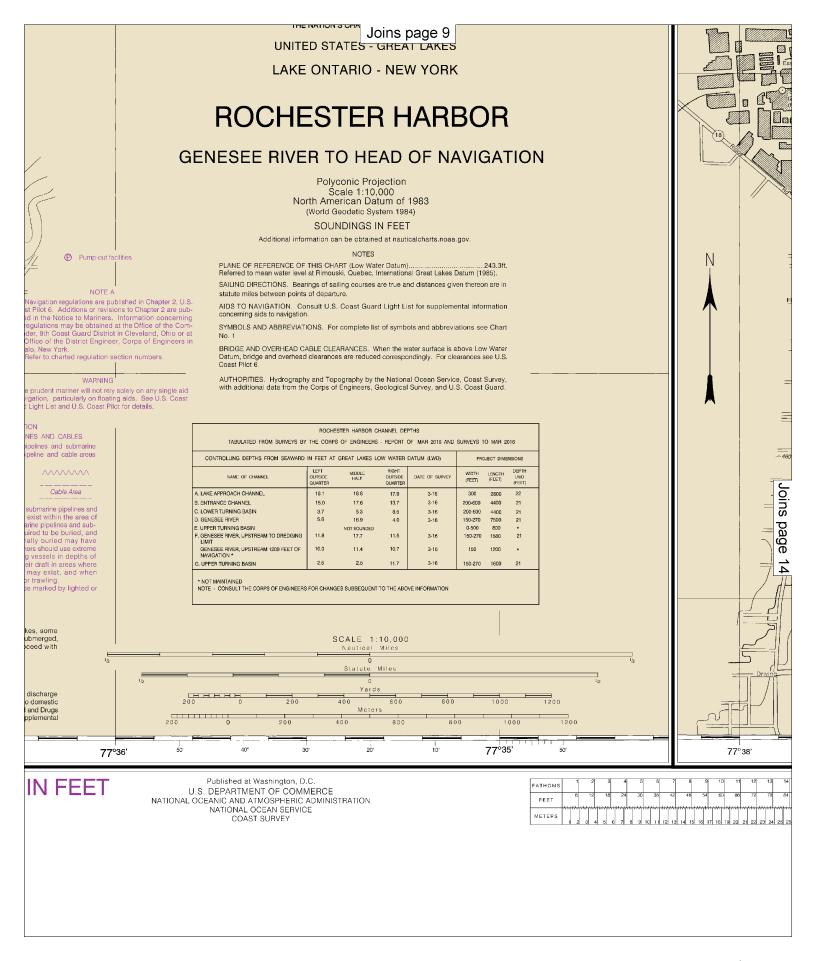

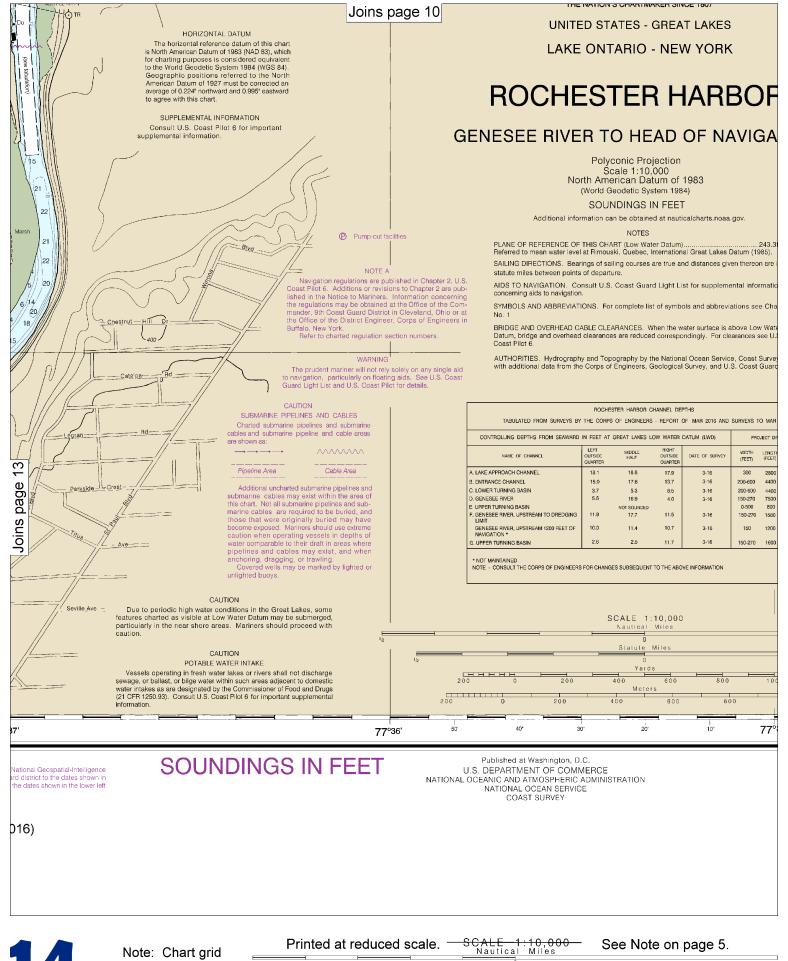


Note: Chart grid lines are aligned with true north.

Printed at reduced scale.

SCALE 1:10,000
Nautical Miles

See Note on page 5.

Yards
200 0 200 400 600 800 1000 1200

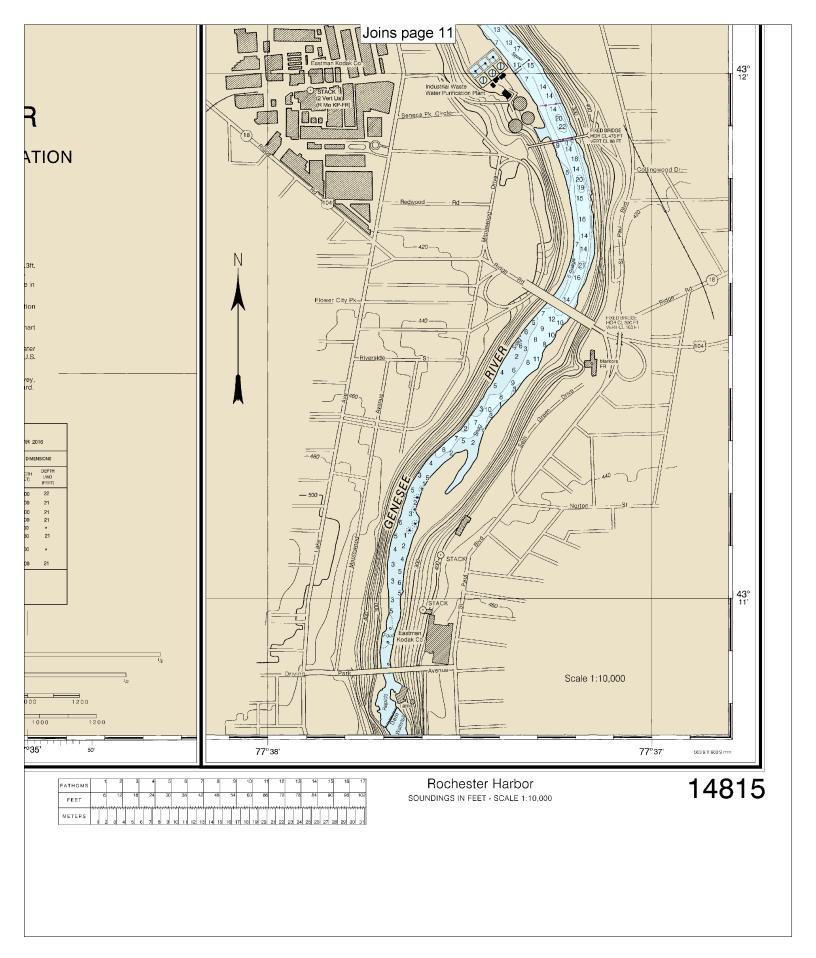



VHF Marine Radio channels for use on the waterways:

Channel 6 – Inter-ship safety communications.

Channel 9 – Communications between boats and ship-to-coast.

Channel 13 – Navigation purposes at bridges, locks, and harbors.

Channel 16 – Emergency, distress and safety calls to Coast Guard and others, and to initiate calls to other

vessels. Contact the other vessel, agree to another channel, and then switch.

Channel 22A – Calls between the Coast Guard and the public. Severe weather warnings, hazards to navigation and safety warnings are broadcast here. Channels 68, 69, 71, 72 and 78A – Recreational boat channels.

Getting and Giving Help — Signal other boaters using visual distress signals (flares, orange flag, lights, arm signals); whistles; horns; and on your VHF radio. You are required by law to help boaters in trouble. Respond to distress signals, but do not endanger yourself.

Distress Call Procedures

- Make sure radio is on.
- Select Channel 16.
- Press/Hold the transmit button.
- Clearly say: "MAYDAY, MAYDAY, MAYDAY."
- Also give: Vessel Name and/or Description; Position and/or Location; Nature of

Emergency; Number of People on Board.

- · Release transmit button.
- Wait for 10 seconds If no response Repeat MAYDAY call.

HAVE ALL PERSONS PUT ON LIFE JACKETS!



NOAA Weather Radio All Hazards (NWR) is a nationwide network of radio stations broadcasting continuous weather information directly from the nearest National Weather Service office. NWR broadcasts official Weather Service warnings, watches, forecasts and other hazard information 24 hours a day, 7 days a week.

http://www.nws.noaa.gov/nwr/

Quick References

Nautical chart related products and information — http://www.nauticalcharts.noaa.gov

Interactive chart catalog — http://www.charts.noaa.gov/InteractiveCatalog/nrnc.shtml

Report a chart discrepancy — http://ocsdata.ncd.noaa.gov/idrs/discrepancy.aspx

Chart and chart related inquiries and comments — http://ocsdata.ncd.noaa.gov/idrs/inquiry.aspx?frompage=ContactUs

Chart updates (LNM and NM corrections) — http://www.nauticalcharts.noaa.gov/mcd/updates/LNM_NM.html

Coast Pilot online — http://www.nauticalcharts.noaa.gov/nsd/cpdownload.htm

Tides and Currents — http://tidesandcurrents.noaa.gov

Marine Forecasts — http://www.nws.noaa.gov/om/marine/home.htm

National Data Buoy Center — http://www.ndbc.noaa.gov/

NowCoast web portal for coastal conditions — http://www.nowcoast.noaa.gov/

National Weather Service — http://www.weather.gov/

National Hurrican Center — http://www.nhc.noaa.gov/

Pacific Tsunami Warning Center — http://ptwc.weather.gov/

Contact Us — http://www.nauticalcharts.noaa.gov/staff/contact.htm



For the latest news from Coast Survey, follow @NOAAcharts



This Booklet chart has been designed for duplex printing (printed on front and back of one sheet). If a duplex option is not available on your printer, you may print each sheet and arrange them back-to-back to allow for the proper layout when viewing.